




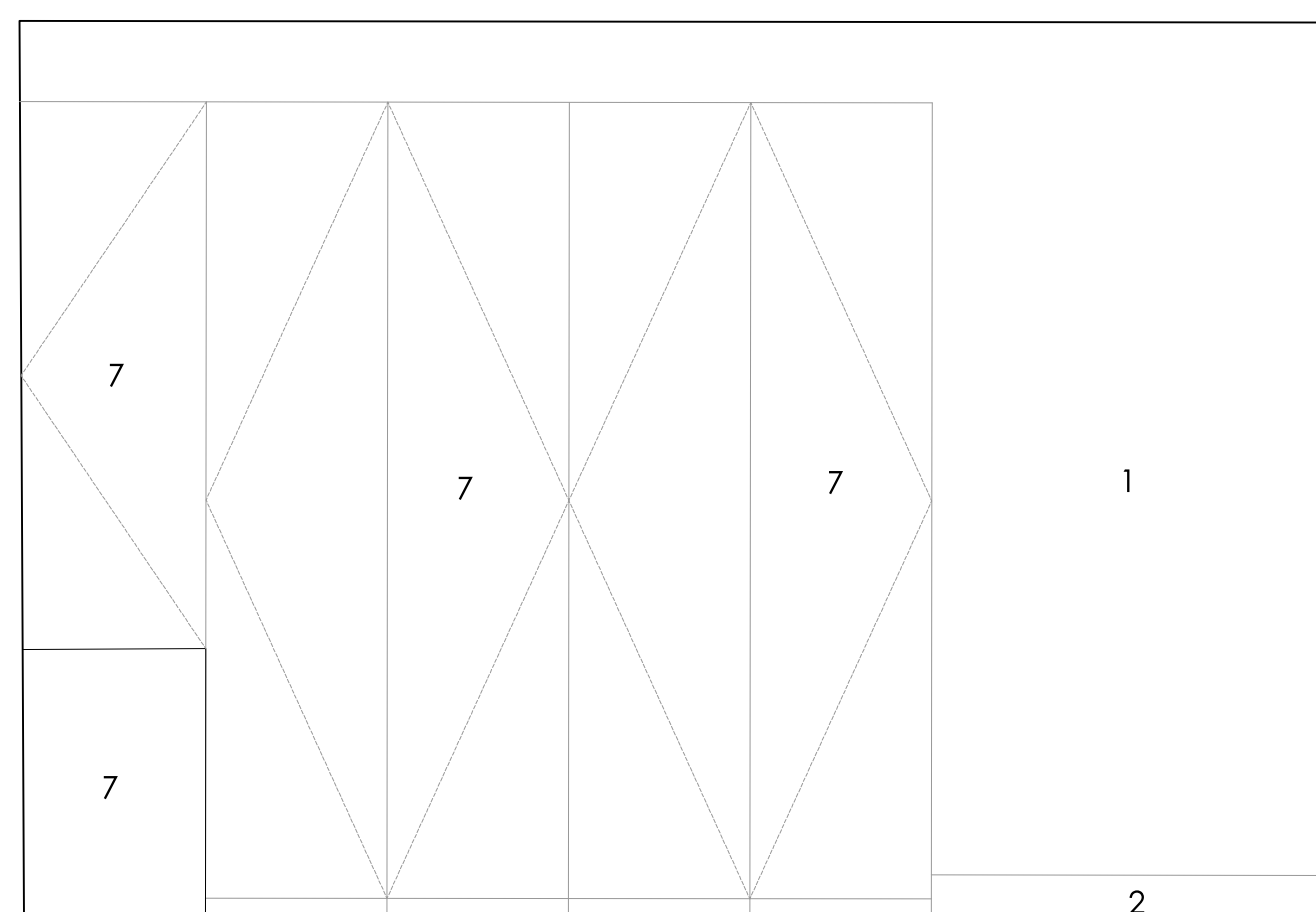

02 ELEVATION A

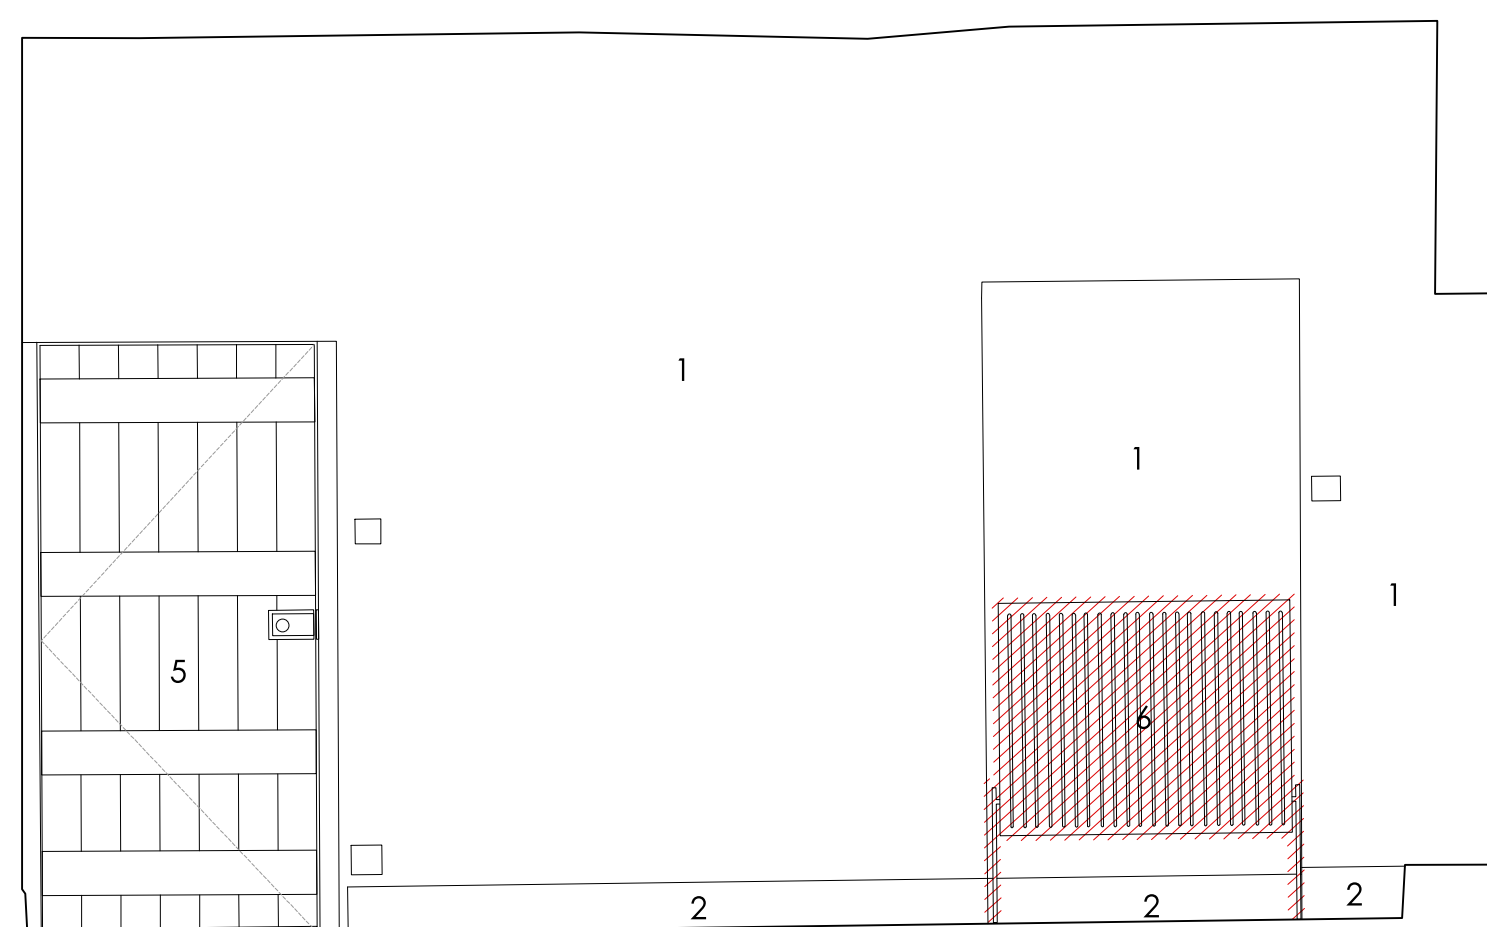


03 ELEVATION B

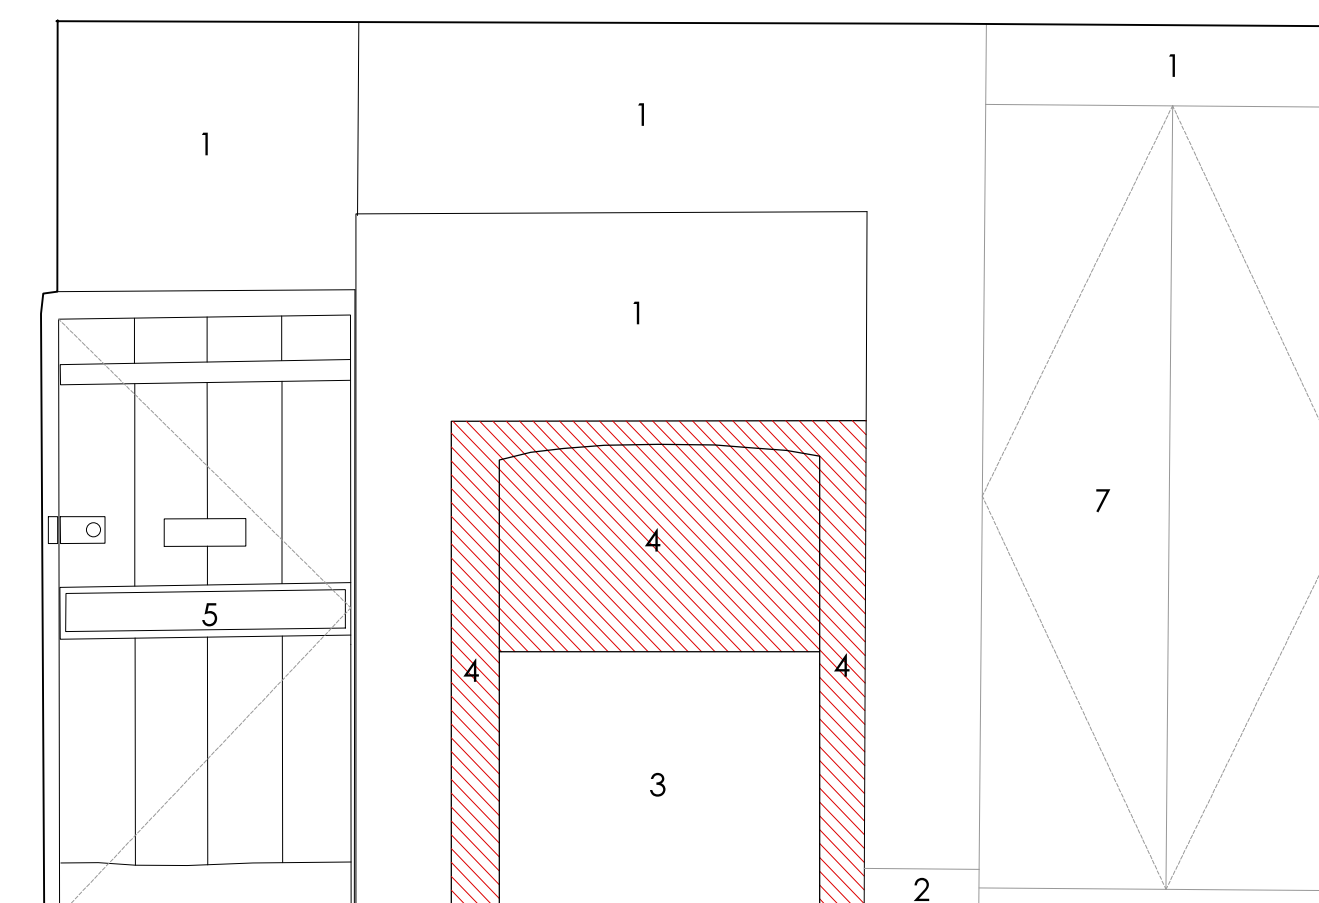


04 ELEVATION C

1. Carefully repair existing wall finish and make good existing plaster - using appropriate lime plaster mix, paint finish.
2. Carefully remove existing skirting and replace with new timber skirting boards, paint finish.
3. Existing AGA to be carefully removed.
4. Existing Tiles to be carefully removed. Walls to be repaired.
5. Existing window and doors to be stripped, repaired and repainted.
- Ironmongery to be replaced if damaged.
6. Existing radiator to be carefully removed. Wall to be repaired.
7. Existing Joinery to be carefully removed and replaced with new cabinet units. Painted MDF finish.
8. Existing sink to be carefully removed and replaced with a new Armigite Shanks Belfast sink or similar approved. - Taps and mixers stainless steel finish, manufacturer to be confirmed.
9. Existing Clay Quarry Tile Floor to be carefully stripped, cleaned and re-laid. Under floor heating system to be implemented as per manufacturers instructions. Quarry Tile to be re-laid. See CARE Engineers details.
10. Ceiling to be carefully repaired and re-painted, retain hooks within the ceiling.
11. Secondary glazing to be fitted internally for thermal efficiency.

Note: Remedial works as per CARE Engineers drawings.

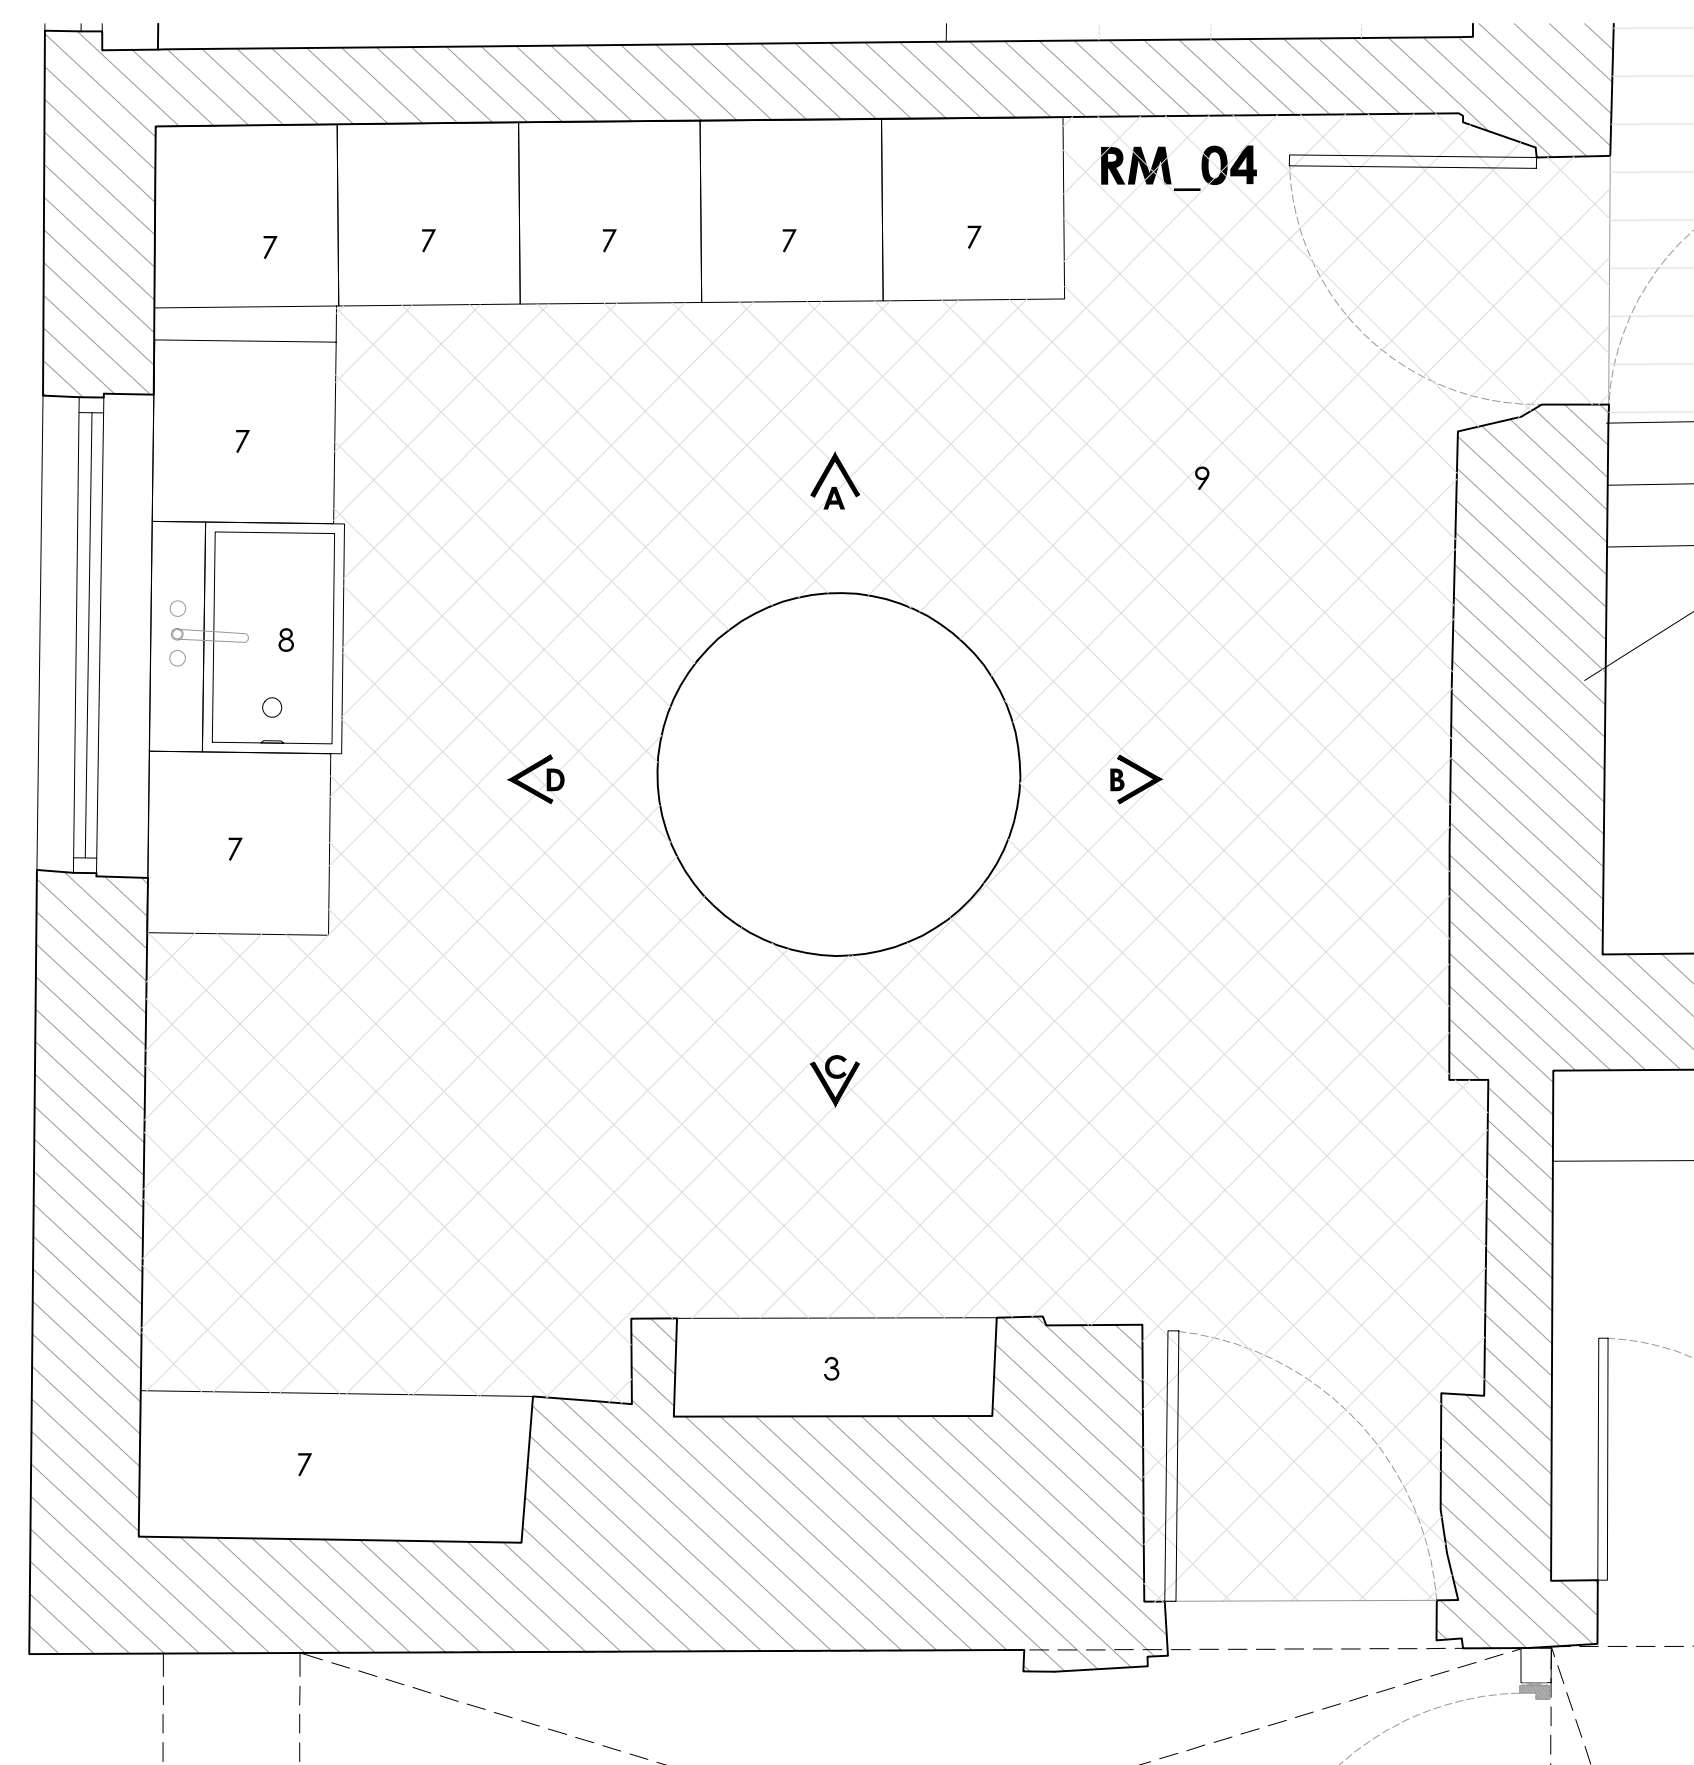

01 P L A N

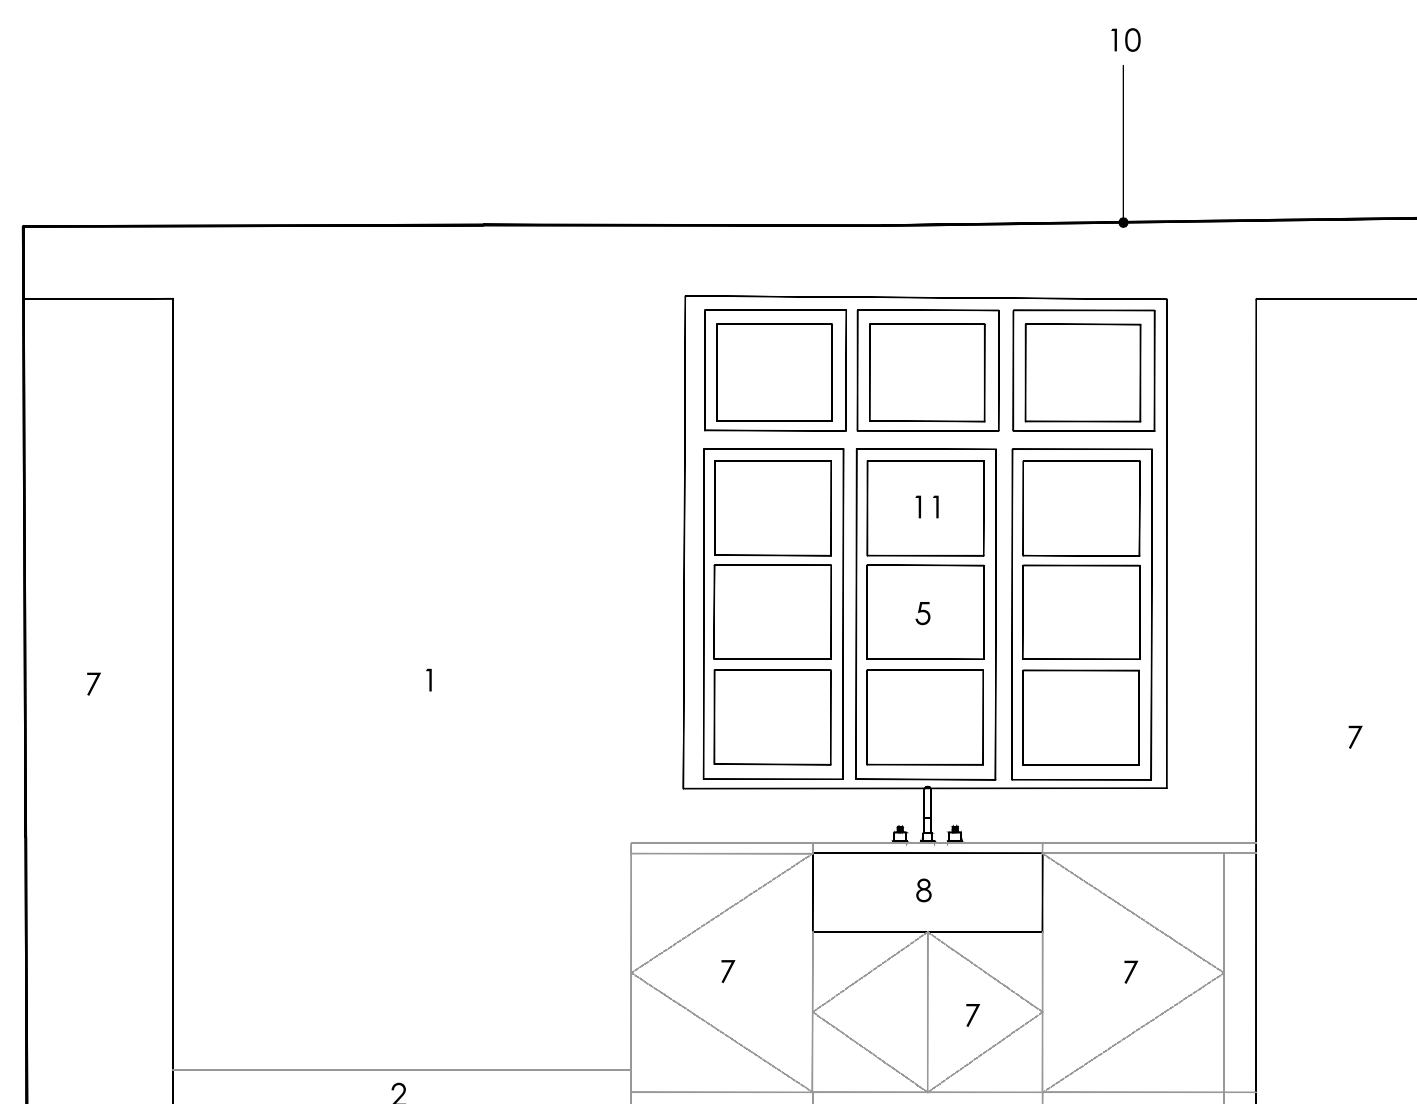

05 ELEVATION D