


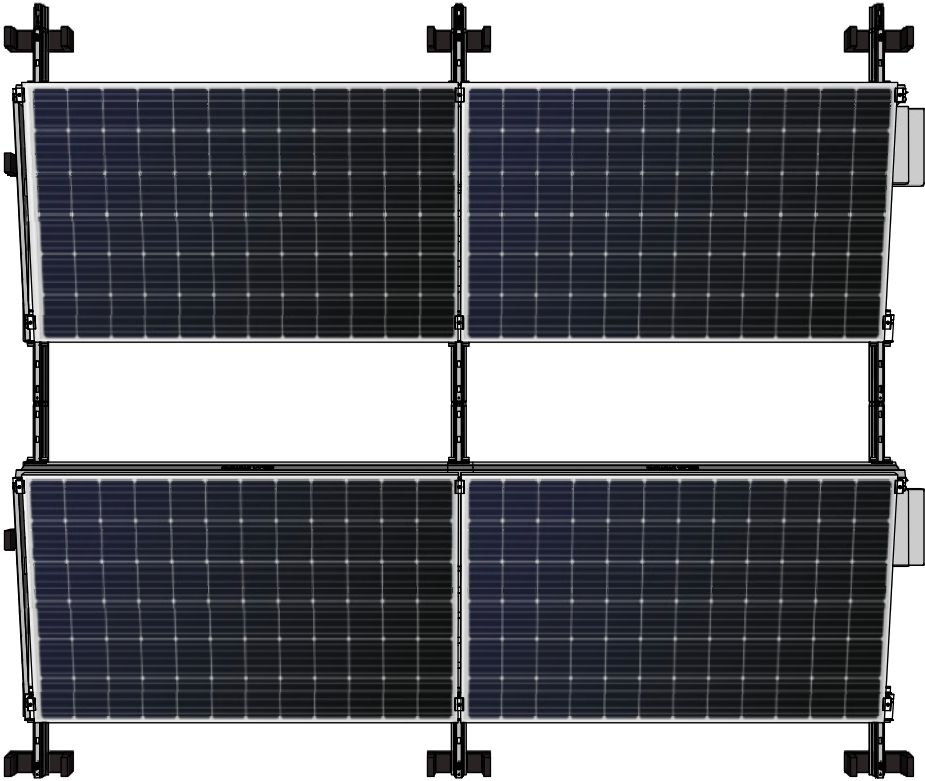

TOP



REAR



LEFT



RIGHT

NTS@A3

NOTES -

1) THE PROFESSIONAL TEAM ARE TO CERTIFY THAT THE BUILDING IS CAPABLE OF SUPPORTING THE PV SYSTEM AND THE BALLAST LOADS ARE SUITABLE PRIOR TO WORKS COMMENCING.

2) THE PV SYSTEM IS TO BE READ IN CONJUNCTION WITH ALL WATT ENERGY SAVER DRAWINGS AND THE MANUFACTURERS INSTALLATION GUIDELINES.

3) SACRAFICIAL MEMBRANE TO BE INSTALLED BY ROOFING CONTRACTOR IF REQUIRED.

4) RUBBER TILE CARRIER TO BE INSTALLED TO THE REAR OF EACH ROW.

5) REFER TO SYSTEM DIMENSION DRAWING FOR PANEL DIMENSIONS