


Contractors are responsible for checking all dimensions on site prior to work commencing.Due to areas of the structure being covered, unexposed or otherwise inaccessible the notes / specifications of existing materials are subject to confirmation of site when it is feasible to expose the relevant areas of construction. All material schedules are given in good faith and for pricing purposes only. It is the responsibility of the contractor to check their accuracy before ordering any materials. Remway Design accepts no responsibility for the accuracy of these material schedules.

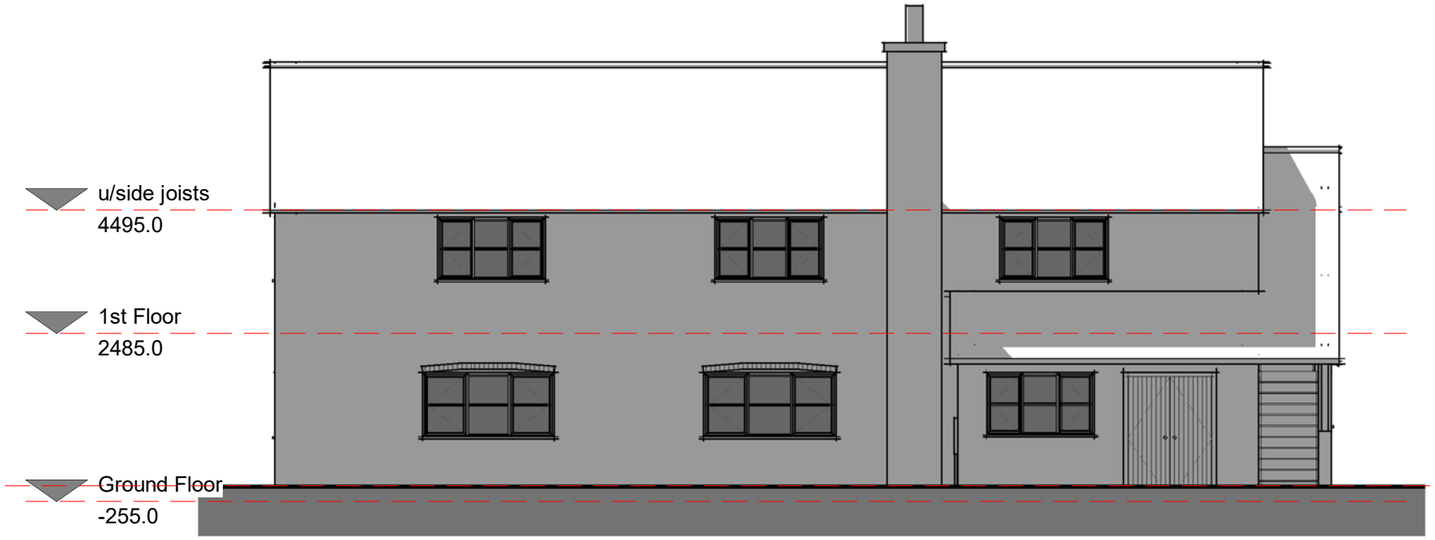

01 - Front
1 : 100

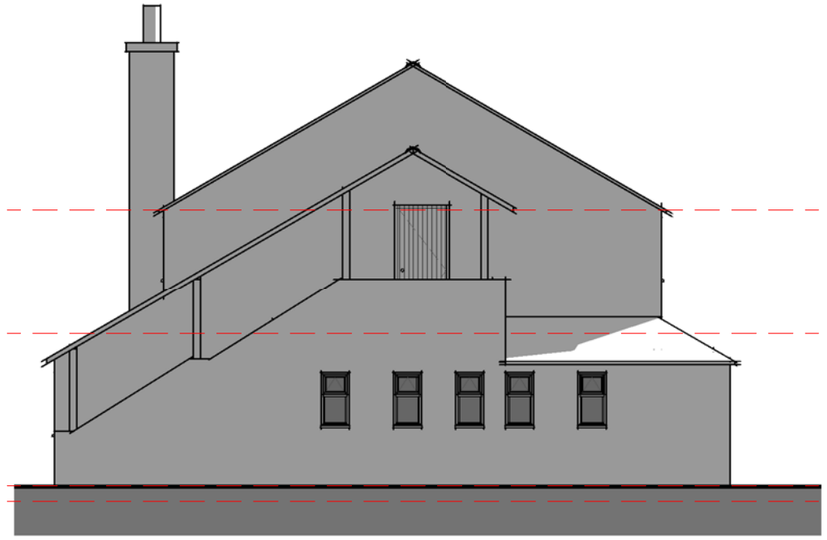

02 - Right Flank
1 : 100

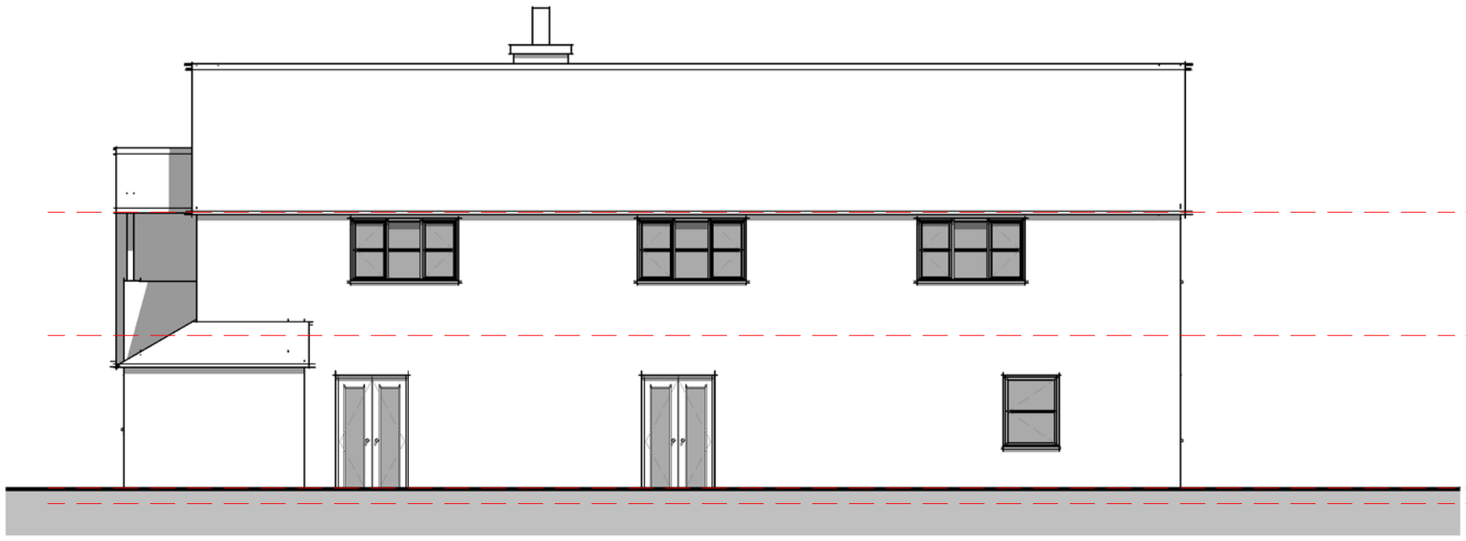

03 - Rear
1 : 100

External Repair Schedule:

- Wipe the bricks with a dry microfiber cloth to remove dust, dirt and cobwebs.
- Scrape the crumbling paint with a stiff brush to ensure that they are smooth to the touch.
- Sand the bricks with low-grit sandpaper. The surface should be perfectly smooth to the touch. You may leave the original coat of paint intact as long as it is smooth
- Mix a 50-50 solution of mild dish soap and water. Wash the bricks with a sponge and let them dry thoroughly.
- Inspect the bricks carefully for cracks. Apply some spackling compound, if needed, and smooth it into place with a putty knife. Let the compound dry.
- Sand the spackling compound until it is smooth to the touch. Use an emery board for small areas and tight spots.
- Wipe the bricks with a damp rag to remove the sandpaper dust.
- Inspect the bricks thoroughly as any bumps or flakes will show through the upcoming primer and paint, so repeat the sanding and wiping steps as necessary.
- Apply one coat of a thick, stain-blocking primer to the bricks with a thick-nap roller. Coat crevices or tight spots with a paint brush. Let this first coat of primer dry. Then apply a second coat of primer and let this coat dry thoroughly
- Apply at least two coats of Cream latex paint to the bricks, working in small sections and from the top down. Let the paint dry thoroughly between coats. Apply a third coat if necessary



04 - Left Flank
1 : 100

Packing Shed,Glenside South,W/Pinchbeck

Proposed Elevations

Drg No

2608 / 010 rev A

remway Design Ltd