
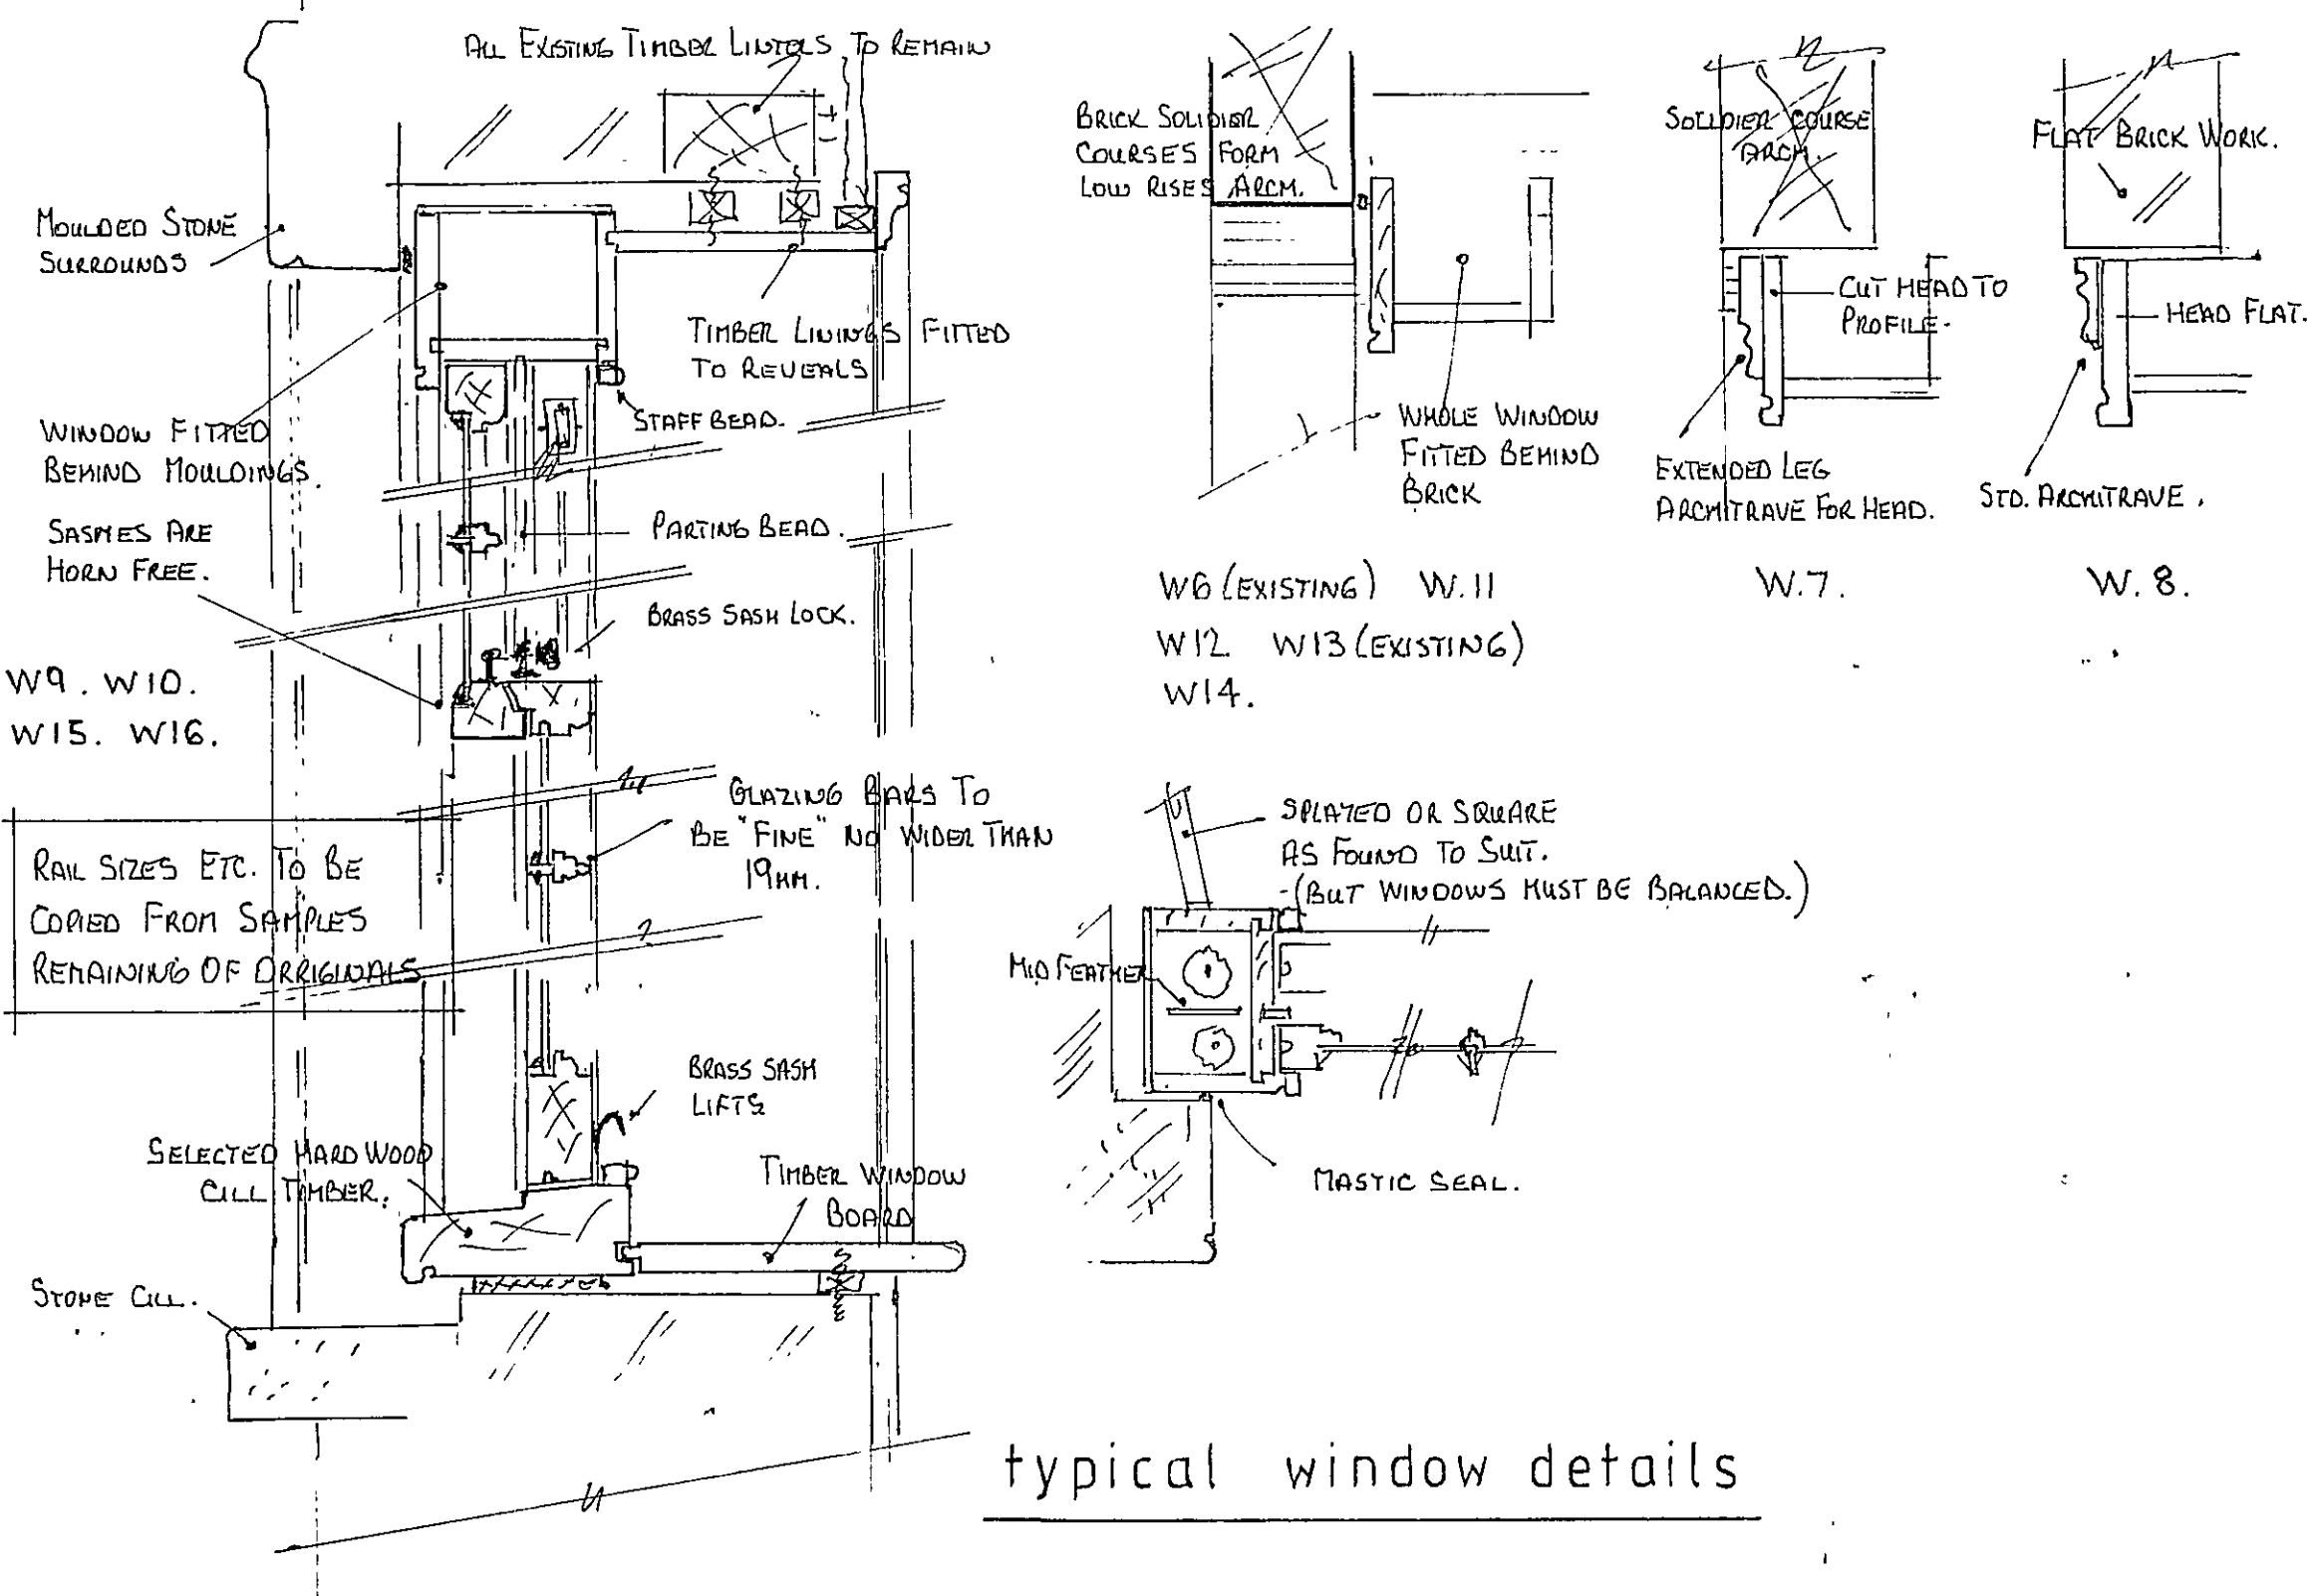
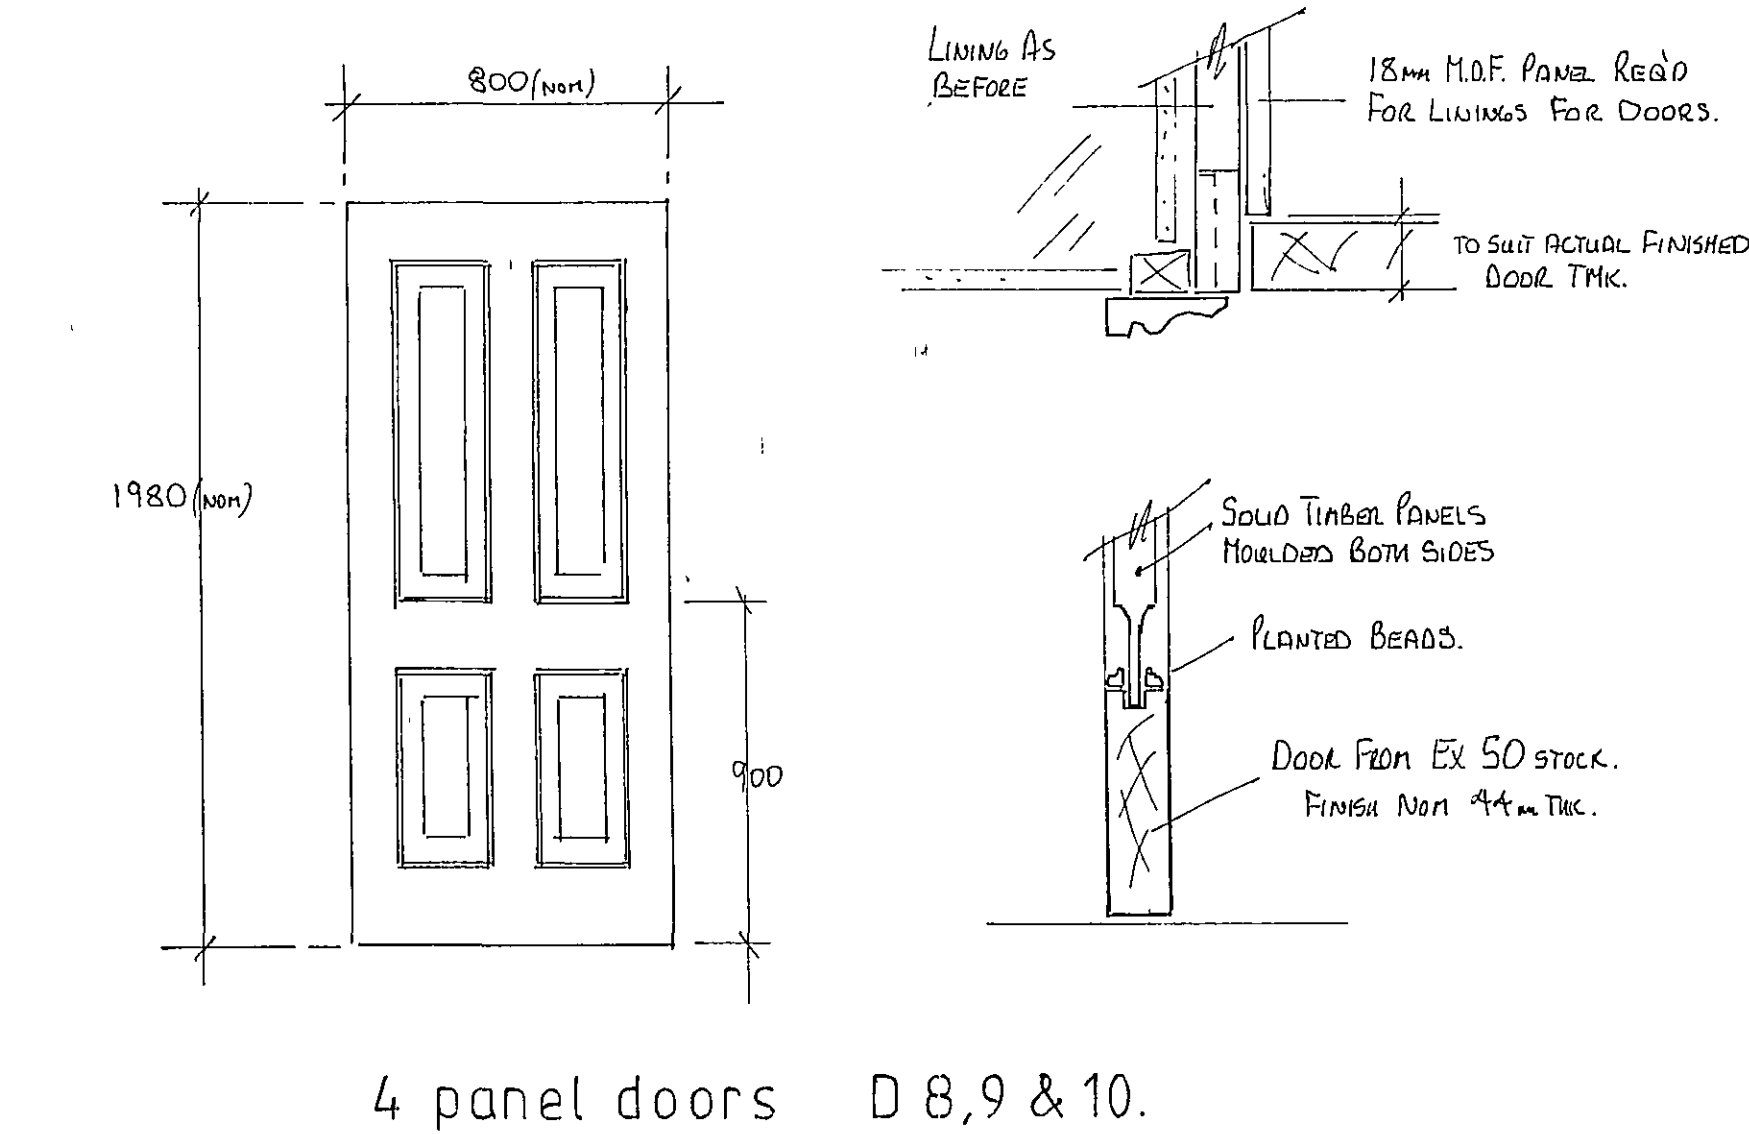


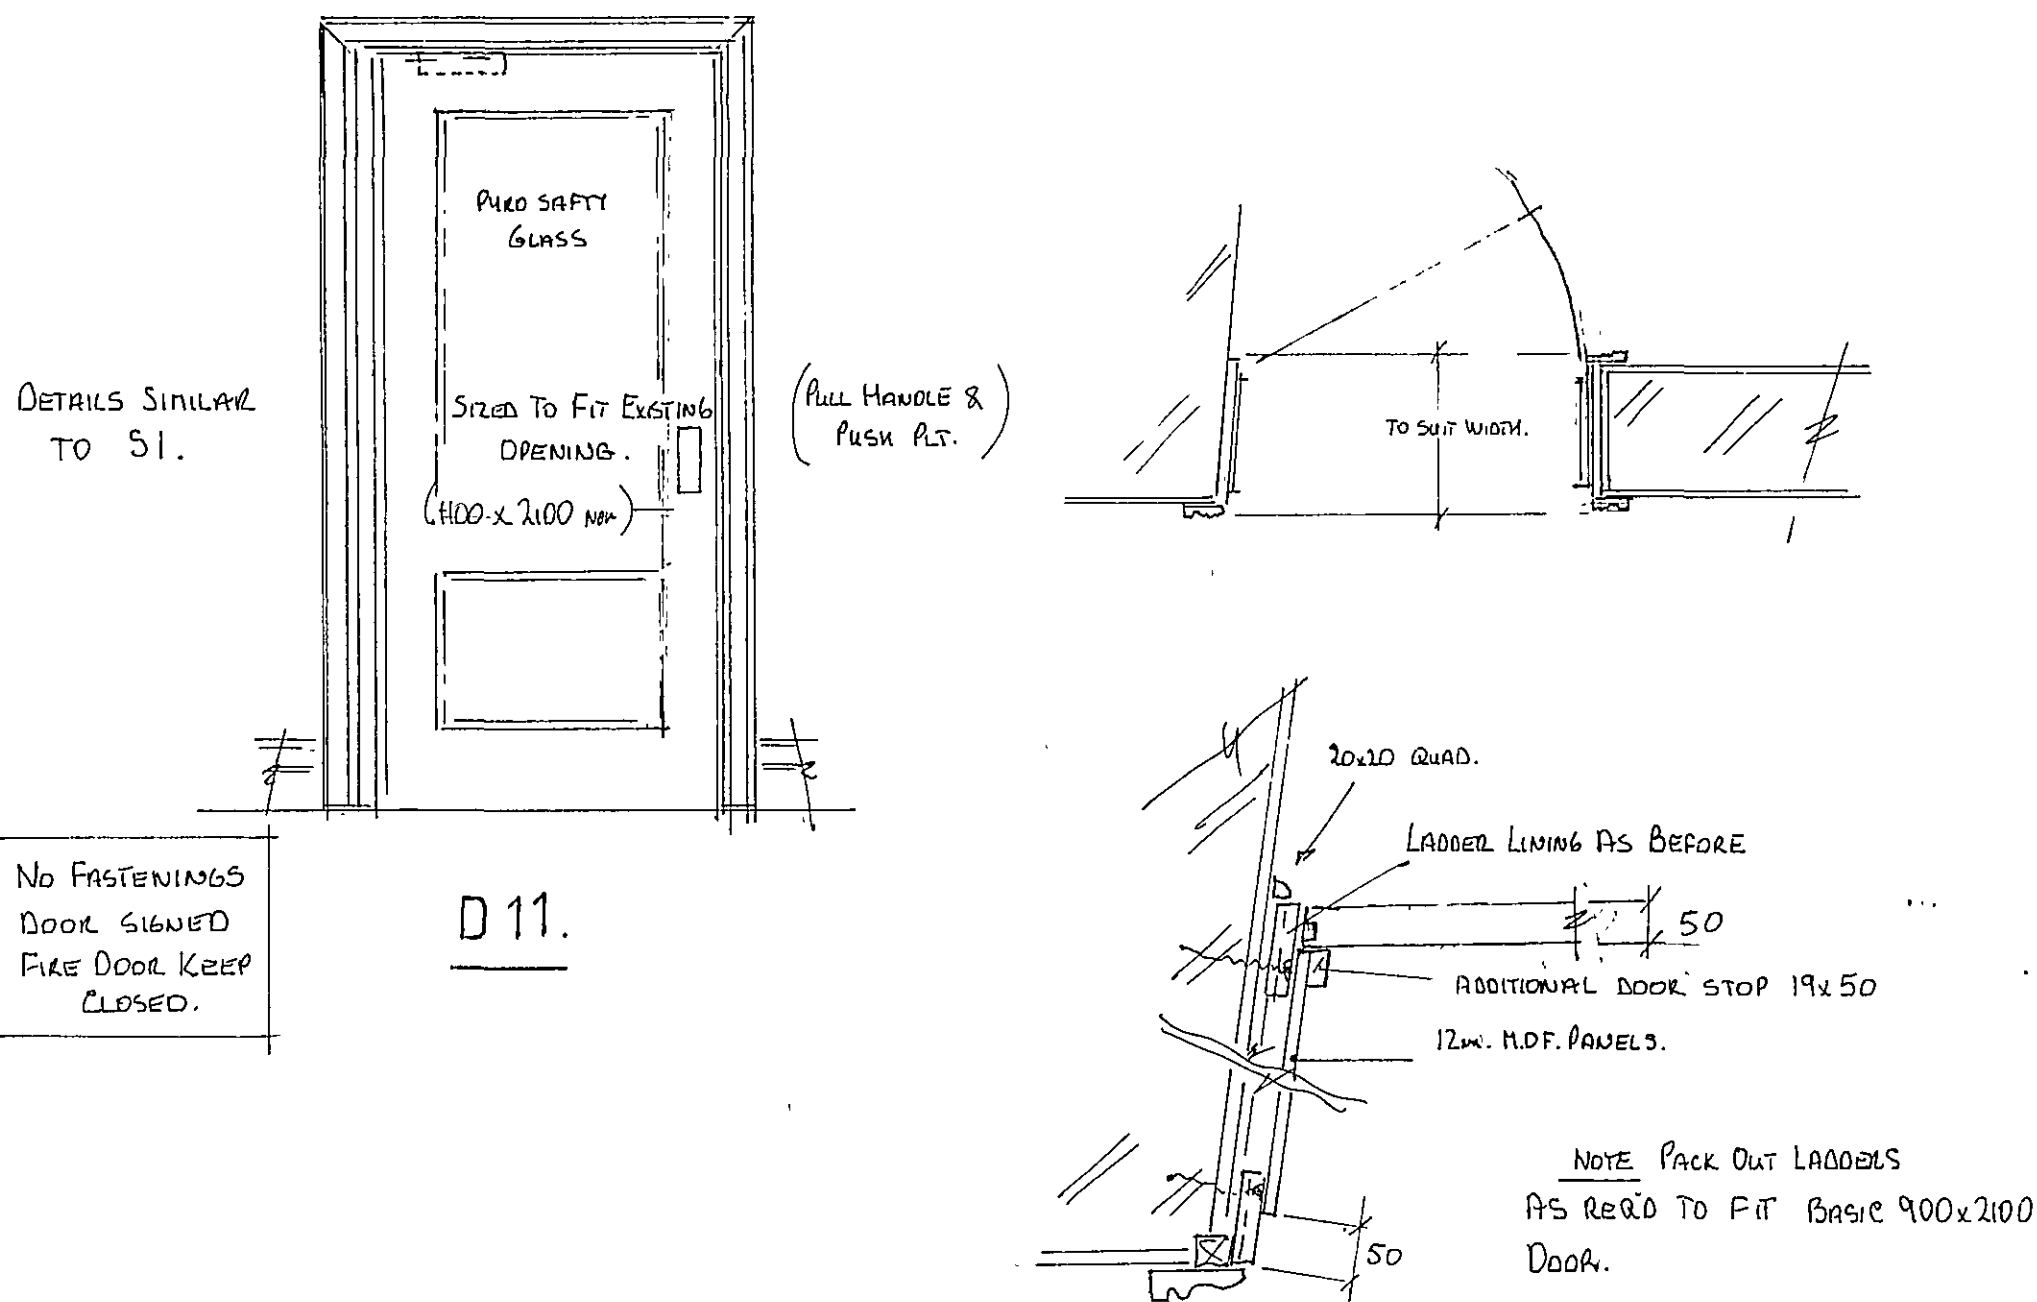

WINDOW NOTES. THE EXISTING TIMBER VERTICAL SLIDING SASH WINDOWS INCORRECTLY REMOVED REMAIN AS DISCARDED "BITS & PIECES". ALSO STILL REMAINING ON SITE ARE THE C.I. SASH WEIGHTS. IT IS INTENDED TO USE THE OLD PARTS AS PATTERN GUIDES FOR THE NEW UNITS. AND RE-USE THE OLD SASH WEIGHTS.

THE SIZES GIVEN ARE FOR GUIDE PURPOSES. THE MANUFACTURE MUST RE-CHECK AND ENSURE THAT EACH NEW WINDOW WILL SIT CORRECTLY WITHIN THE EXISTING OPENING.

TRADITIONAL CONSTRUCTION METHODS ARE TO BE USED. THE ONLY CONCESSION BEING SOME DISCRETE DRAUGHT STRIPPING. PROVIDE NEW PULLEY WEIGHTS SASH FASTENINGS ETC. USE SUITABLE WAXED SASH CORDS FOR STRINGING WEIGHTS.

GLASS WILL BE 3mm CLEAR FIXED WITH SPRIGS & LINSEED OIL PUTTY. REBATES WILL BE PAINTED PRIMER & 1 COAT W/COAT. BEFORE GLAZING. N.B. WINDOWS W.15 & W.16. HAVE GLASS ALMOST DOWN TO FLOOR LEVEL. THE SMALL PANE SIZE DOES MAKE THEM SAFER BUT IN THESE LOWER SASHES IT IS BETTER TO USE TOUGHENED GLASS.

ALL VERTICAL SASH WINDOWS PROVIDE ADEQUATE "MEANS OF ESCAPE"

DETERMINED
PLAN

SHDC
Planning & Development
23 MAR 2007
Ref: 0375/07