Bouncing Element Jump L Art. 013250250

Installation and maintenance manual



6030-081 2m square trampoline

Date: 07.03.2017

Wicksteed Leisure Limited
Digby Street Kettering
Northants NN16 8YJ
T: +44(0)1536 517028
F: +44(0)1536 410633
sales@wicksteed.co.uk

Index

1 Bill of material 2

2 Technical data and notes 2

3 Age restriction 3

4 Installation and assembly instructions 3

5 Dimensions 4

6 Maintenance manual 6

7 Safety and user notes 7

8 Documentation 7

Maintenance history 8

Wicksteed Leisure Limited
Digby Street Kettering
Northants NN16 8YJ
T: +44(0)1536 517028
F: +44(0)1536 410633
sales@wicksteed.co.uk

1 Bill of material

- Bouncing Element Jump L fully assembled for installation
- 4 eyebolts M12 for lifting

2 Technical data and notes

- External dimensions: 2500x2500x375 mm
- Jumping surface: 1950x1950/2000x2000 mm
- Weight: 230 Kg
- Material: -steel hot dip galvanized
  -safety slabs
  -plastic slats
- When setting up the Bouncing Element Jump L, please observe the safety area is according to Chapter 5 Dimensions
- Spare parts for Bouncing Element Jump L have to be purchased from the manufacturer only
- For a maximum fall height of 1000 mm safety surface must be according to EN 1176-1:2008 4.2.8.5 table 4 or have a HIC greater or equal 1000
- Pit size: 2600x2600x600 mm (LxBxH)
- Excavation of the pit: 4,056 m³
- Needed combined frost protection and load bearing layer material: 1,066 m³
- Lifting equipment is needed

Wicksteed Leisure Limited
Digby Street Kettering
Northants NN16 8YJ
T: +44(0)1536 517028
F: +44(0)1536 410633
sales@wicksteed.co.uk

3 Age restriction

Bouncing Element Jump L is suitable for children from 3 years

Recommended number of users: 1

4 Installation and assembly instructions


1. Dig pit: 2600x2600x600 mm
2. Create combined frost protection and load bearing layer as shown in Chapter 5 Drawing 2
3. Screw the eyebolts into the existing holes and use as lifting point
4. Lift Bouncing Element Jump L and place it in the middle of the pit
5. Unscrew eyebolts
6. Fill the gap with parts of excavation

Wicksteed Leisure Limited
Digby Street Kettering
Northants NN16 8YJ
T: +44(0)1536 517028
F: +44(0)1536 410633
sales@wicksteed.co.uk


Trampoline Surfacing & Basework Detail

Install a concrete plinth as shown below when Wet Pour, Eco Tumble and Artificial Grass are used.
Note: If installing into a grass area with Safety Grass Mats, no plinth will be required.


Wet Pour Surfacing

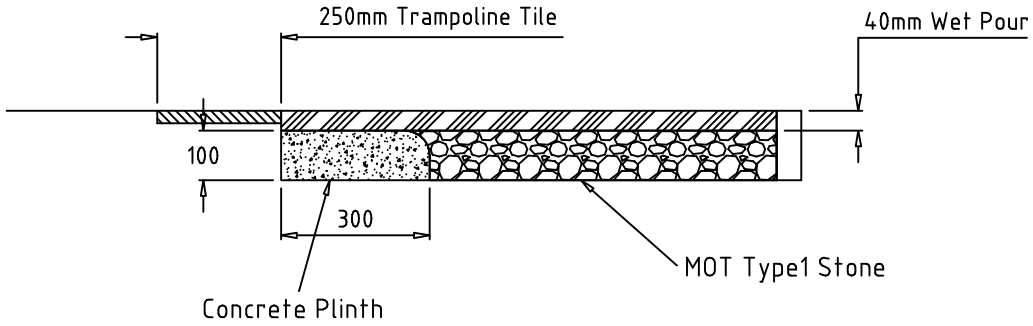


Eco Tumble Surfacing

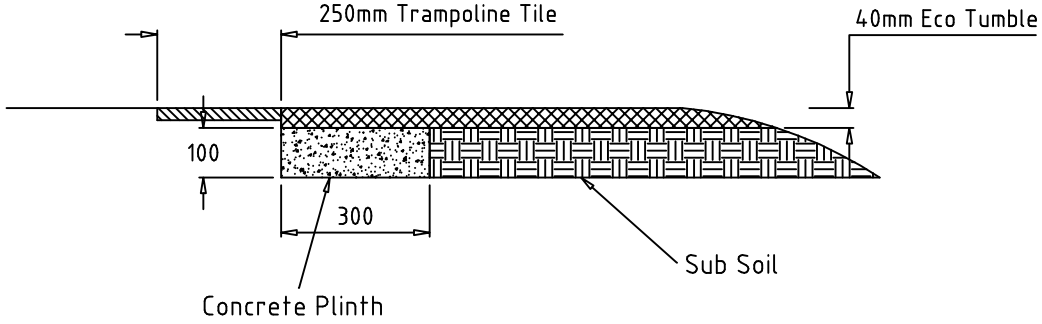

For Artificial Grass, install a 300mm x 100mm concrete block
To be installed to suit thickness of surface being laid.

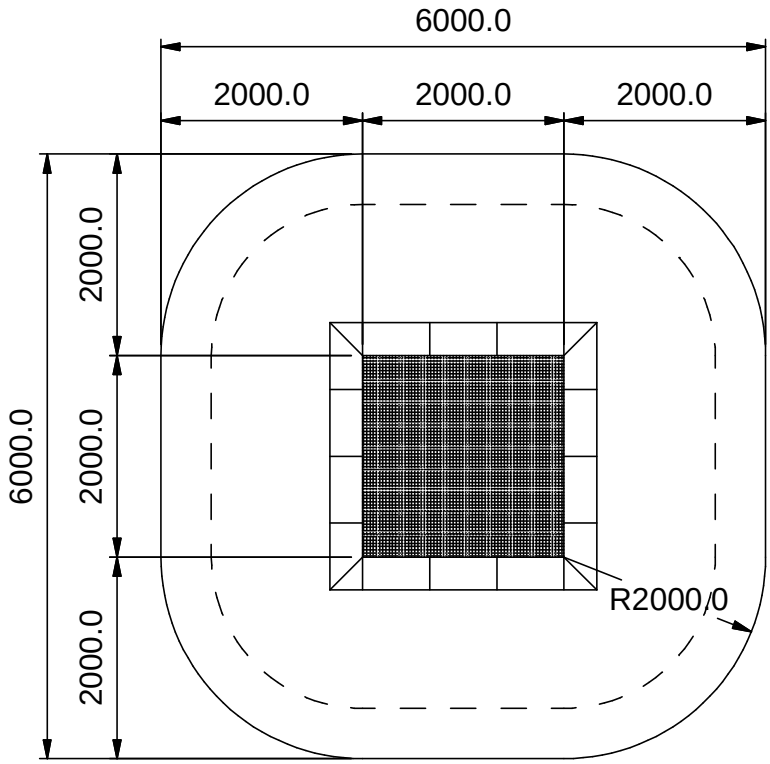


Safety surfacing
25.5m² of 40mm wetpour
with 31.5m of edging

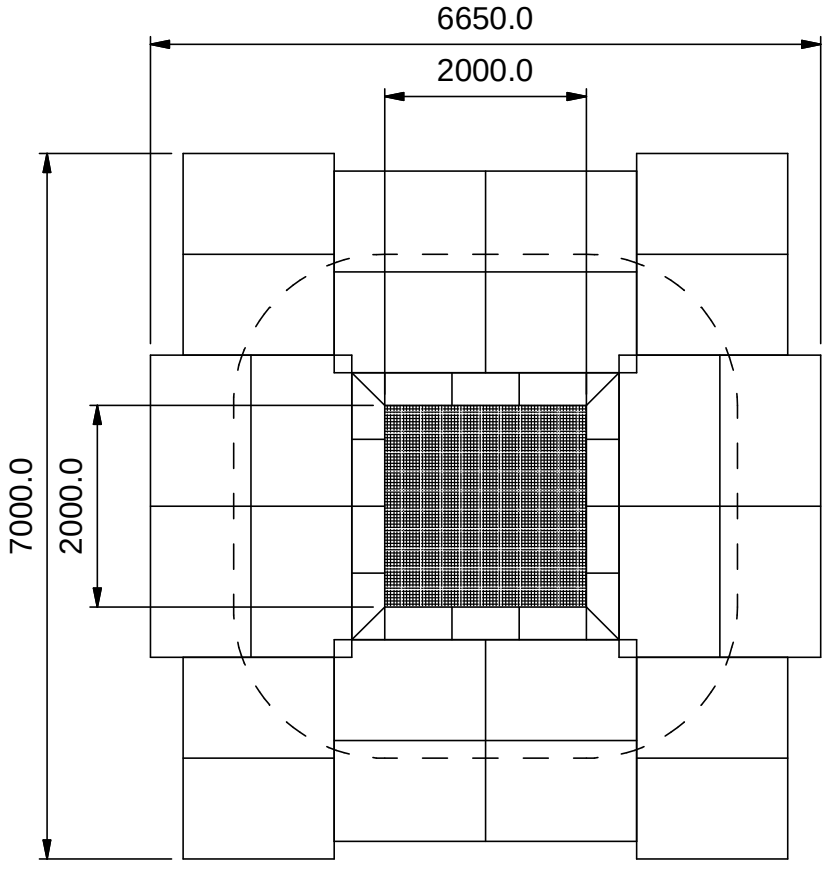


Safety surfacing
24 grassmats (1m x 1.5m)

Safety surfacing is based on Wicksteed products; other suppliers systems may differ and as such adherence to the required critical fall height is required.

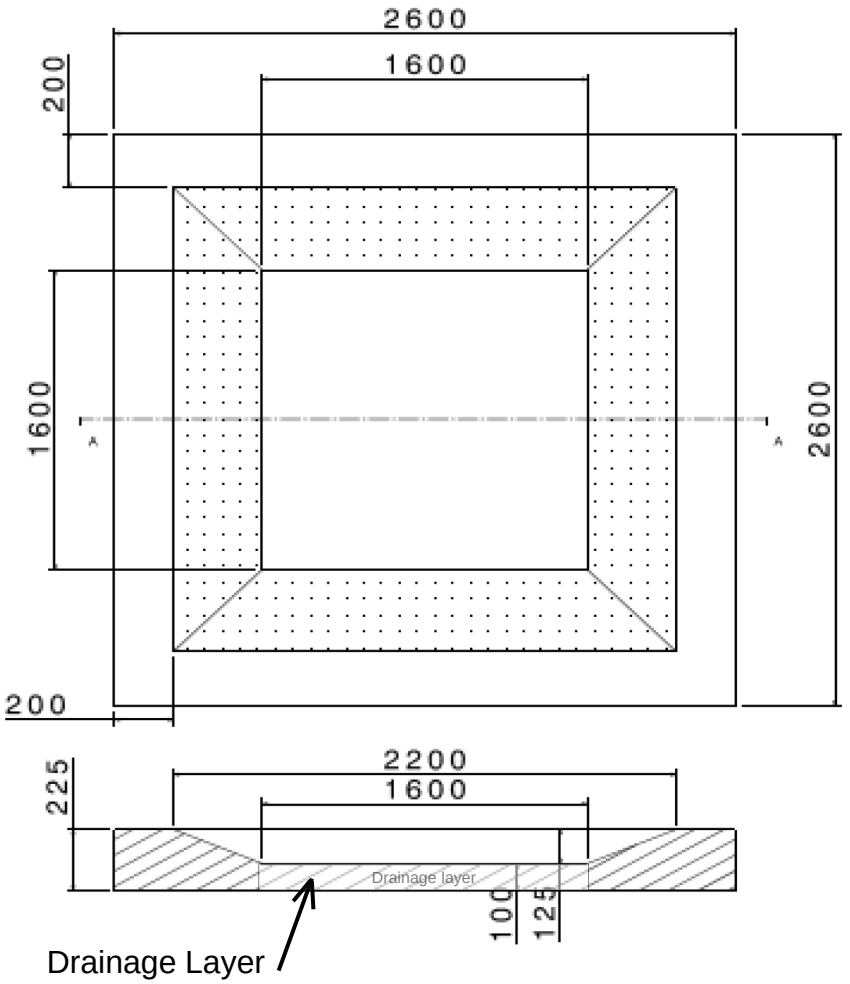

Drawing 2: Combined frost protection and load bearing layer

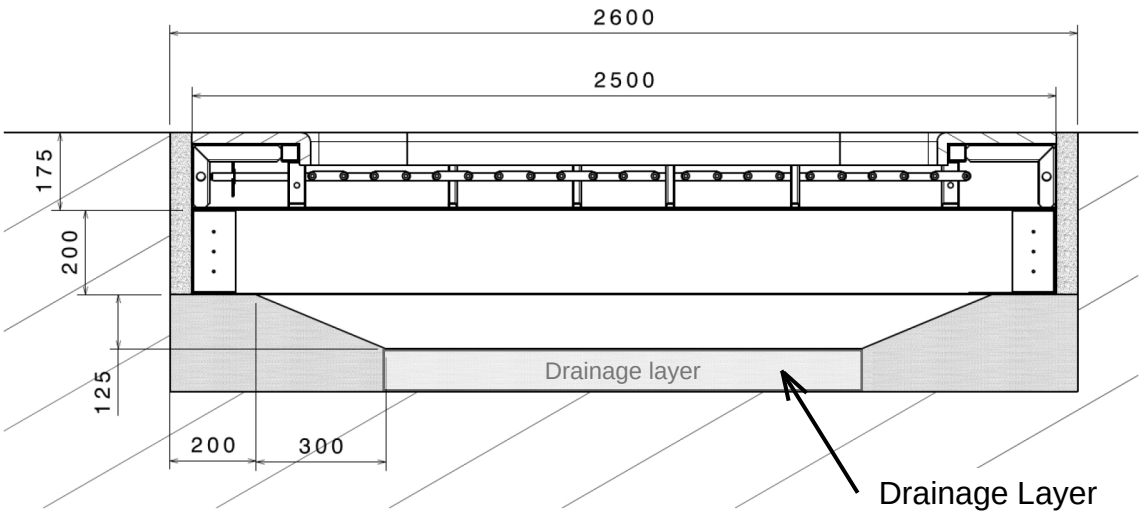

Drawing 3: Cut through installed Bouncing Element Jump L

Wicksteed Leisure Limited
Digby Street Kettering
Northants NN16 8YJ
T: +44(0)1536 517028
F: +44(0)1536 410633
sales@wicksteed.co.uk

6 Maintenance manual

N. U.: Normal usage

Ex. U.: Extreme usage

1. Visual inspection of fall protection and the safety surface. Remove obvious hazards that f. e. have been caused by vandalism. Check fall protection for cracks or holes.

Maintenance interval: N. U.: weekly, Ex. U.: daily

2. Check slats for damages.

Maintenance interval: N. U.: weekly, Ex. U.: daily

3. Control free space under mat of the Bouncing Element Jump XS-XL

Maintenance interval: N. U.: annually, Ex. U.: semi annually

If there is something on the drainage layer you have two possibilities to remove. See Point 4.

4. Check frame for scratches, bumps and rust. Check springs for damage and deformation.

For this you have 2 kinds of possibilities:

1. Remove ground around the bouncing element 200 mm wide and deep. Unscrew hinges on one side. Lift the top and secure against falling down. Check frame visually for cracks and other damages. Reverse assembling.

Wicksteed Leisure Limited
Digby Street Kettering
Northants NN16 8YJ
T: +44(0)1536 517028
F: +44(0)1536 410633
sales@wicksteed.co.uk

2. Use release tool (available at Wicksteed Leisure), unhook feathers of the spring mat and remove the mat. Reverse assembling.

Maintenance interval: N. U.: annually Ex. U.: semi annually

7 Safety and user notes

- No somersaults, belly and back jumps
- Consider maximum capacity
- No food / beverage
- No alcohol / drugs
- Wear shoes with flat sole
- No jewellery

8 Documentation

06.10.2016: New Layout

06.10.2016: New Dimensions

06.10.2016: New combined frost protection and load bearing layer

Wicksteed Leisure Limited
Digby Street Kettering
Northants NN16 8YJ
T: +44(0)1536 517028
F: +44(0)1536 410633
sales@wicksteed.co.uk

Maintenance history

Date	Kind of work	Name, Sign

Wicksteed Leisure Limited
Digby Street Kettering
Northants NN16 8YJ
T: +44(0)1536 517028
F: +44(0)1536 410633
sales@wicksteed.co.uk